Small Size, High Accuracy Pressure Control Digital Pressure Sensor

Features

- High accuracy digital pressure sensor
- High brightness red LED (LED height: 9.5mm)
- High resolution: 1/1000
- Convertible pressure unit
 - Negative pressure, Compound pressure: kPa, kgf/cm², bar, psi, mmHg, mmH₂O, inHg
 - Standard pressure : kPa, kgf/cm², bar, psi
- Various output modes: Hysteresis mode, Automatic sensitivity setting mode, Independent 2 output mode, Window comparative output mode
- Chattering prevention for output (Selectable response time: 2.5ms, 5ms, 100ms, 500ms)
- Analog output (1-5VDC) scale function
- Reverse power polarity and overcurrent protection circuit
- Zero-point adjustment function
- Peak and Bottom hold display







PSB Series



PSB Series Connector type

Ordering Information

	$\overline{}$										1		
S	Α	-	٧	01		c	Р	_	Rc	1/8	D	Rc1/8	Standard (PSA Series)
_	T			'-		┌┤	Т		Ь П		Pressure port	NPT1/8	Option (PSA Series)
												M5	Standard (PSB Series)
							0	utpu	t type			No mark	NPN open collector output
												Р	PNP open collector output
						Cal	ble*	1				No mark	Positive (Cable integrated type)
												С	Connector type
				F	res	sure	rang	ge				01	100kPa
												1	1,000kPa
			l _P	ressu	ire t	vne						No mark	Standard pressure
			Ľ			,,,,						V	Negative pressure
												С	Compound pressure
	A	ppea	ranc	е								Α	Regular square (30mm×30mm)
Ito									В	Rectangular (cable type: 10.4mm×54.2mm) (connector type: 10mm×52mm)			
Ite	Ш											PS	Pressure Sensor
			" ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' '										

X1: It is only applied to PSB Series.

Pressure And Max. Pressure Display Range

				, ,			
Туре	kPa	kgf/cm ²	bar	psi	mmHg	inHg	mmH2O
		0.000 to -1.033 (0.051 to -1.033)		0.00 to -14.70 (0.74 to -14.70)			0.0 to -103.3 (5.2 to -103.3)
Standard			0.000 to 1.000 (-0.050 to 1.100)	0.00 to 14.50 (-0.72 to 15.96)	_	_	_
pressure	0 to 1000 (-50 to 1100)		0.00 to 10.00 (-0.50 to 11.00)	0.0 to 145.0 (-7.2 to 159.6)	_	_	_
Compound pressure	-100.0 to 100.0 (-101.2 to 110.0)	-1.020 to 1.020 (-1.034 to 1.122)		-14.50 to 14.50 (-14.70 to 15.96)			-102.0 to 102.0 (-103.4 to 112.2)

^{※ ()} is Max. pressure display range.

※For using a unit mmH₂O, multiply display value by 100.

Pressure Conversion Chart

from to	Ра	kPa	MPa	kgf/cm ²	mmHg	mmH ₂ O	psi	bar	inHg
1Pa	1	0.001	0.000001	0.000010197	0.007501	0.101972	0.000145038	0.00001	0.0002953
1kPa	1000	1	0.001	0.010197	7.500617	101.971626	0.145038	0.01	0.2953
1MPa	1000000	1000	1	10.197162	7500.61683	101971.626	145.038243	10	295.299875
1kgf/cm ²	98066.5	98.0665	0.098067	1	735.55924	10000.0005	14.223393	0.980665	28.959025
1mmHg	133.322368	0.133322	0.000133	0.001359	1	13.595099	0.019337	0.001333	0.039370
1mmH ₂ O	9.80665	0.009807		0.000099	0.073556	1	0.00142	0.000098	0.002896
1psi	6894.733	6.89473	0.006895	0.070307	51.714752	703.0167161	1	0.068947	2.036014
1bar	100000	100	0.100000	1.019716	750.062	10197.1626	14.503824	1	29.529988
1inHg	3386.388	3.386388	0.003386	0.034532	25.40022	345.315507	0.491156	0.033864	1

E.g.) For calculating 760mmHg as kPa: According to above chart, 1mmHg is 0.133322kPa, therefore 760mmHg will be 760×0.133322kPa=101.32472kPa.

Specifications

Droop	o tvno	Gauge pressure						
Pressur	е туре	Negative pressure	Compound pressure					
Model	NPN open collector output	PSA-V01- □ PSB-V01- □ PSB-V01C- □	PSA-01- □ PSB-01- □ PSB-01C- □	PSA-1- □ PSB-1- □ PSB-1C- □	PSA-C01- □ PSB-C01- □ PSB-C01C- □			
%1	PNP open collector output	PSA-V01P- □ PSB-V01P- □ PSB-V01CP- □	PSA-01P- □ PSB-01P- □ PSB-01CP- □	PSA-1P- □ PSB-1P- □ PSB-1CP- □	PSA-C01P- □ PSB-C01P- □ PSB-C01CP- □			
Rated p	ressure range	0.0 to -101.3kPa	0.0 to 100.0kPa	0.0 to 1,000kPa	-100.0 to 100.0kPa			
Display a	and set pressure range	5.0 to -101.3kPa	-5.0 to 110.0kPa	-50 to 1,100kPa	-101.2 to 110.0kPa			
Max. pre	essure range	2 times of rated pressure	2 times of rated pressur					
Applied	fluid	Air, Non-corrosive gas						
Power s	supply	12-24VDC ±10% (Ripple F	P-P : Max. 10%)					
Current	consumption	Max. 50mA						
Control output		NPN or PNP open collector output • Load voltage: Max. 30VDC • Load current: Max. 100mA • Residual voltage - NPN: Max. 1V, PNP: Max. 2V						
Hyste	eresis ^{*2}	1digit fixed (2digits for psi	unit)		2digit fixed			
Repe	at error	±0.2% F.S. ±1digit	±0.2% F.S. ±2digit					
Resp	onse time	Selectable 2.5ms, 5ms, 100ms, 500ms						
Short circuit protection		Built-in						
Analog	output	 Output voltage: 1-5VDC ±2% F.S. Linear: Within ±2% F.S. Eacro-point: Within 1VDC ±2% F.S. Resolution: Approx. 1/200 Output impedance: 1kΩ 						
Display	digit	3½digit						
Display	method	7Segment LED						
Min. dis	play interval	1digit (psi unit: 2 digits are	2digits					
Pressur	e unit	kPa, kgf/cm², bar, psi, mmHg, mmH2O, inHg	kPa, kgf/cm², bar, psi	kPa, kgf/cm², bar, psi, mmHg, mmH2O, inHg				
Display	accuracy	0°C to 50°C: Max. ±1% F.S., -10 to 0°C : Max. ±2% F.S.						
Environ-	Ambient temperature	-10 to 50°C, storage: -20 to 60°C						
ment	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH						
Vibratio	n	1.5mm amplitude at frequency of 10 to 55Hz (for 1 min.) in each X, Y, Z direction for 2 hours						
Material		PSA - Front case: PC, Rear case: PC (Insert glass), Pressure port: die-cast (Zn) PSB - Case, Pressure port, Cover: IXEF PSB-C - Case, Pressure port, Cover: IXEF						
Protection	on structure	IP40 (IEC standard)						
Cable	Cable integrated type	ø4mm, 5-wire, 2m (AWG24, Core diameter: 0.08mm, Number of cores: 40, Insulation out diameter: ø1mm)						
	Connector type	5-wire, 3m (AWG24, Insulation out diameter : ø1mm)						
Approva		C€						
Weight*	3	PSA: Approx. 200g (approx. 200g)	ox. 120g) • PSB: Appro	x. 160g (approx. 70g) • PSB-C	: Approx. 160g (approx. 7			
				-				


X1: '□' is pressure port type. Please refer to the " ■Ordering Information". X2: In hysteresis output mode, detection difference is variable.

X3: The weight includes packaging. The weight in parentheses in for unit only.


※F.S.: Rated pressure.

XEnvironment resistance is rated at no freezing or condensation.

• Analog output voltage-Pressure characteristic

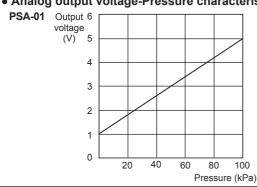



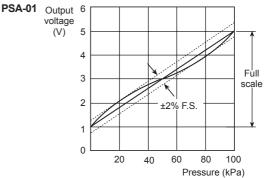

(A) Photoelectric Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoder

(I) SSRs / Power Controllers

(J) Counters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels


F-17 **Autonics**

^{*}There may be ±1digit error in hysteresis by pressure unit calculation error.

 
^{*}The specification of pressure port is marked on the upper part of the case.


Dimensions (unit: mm)

PSA Series

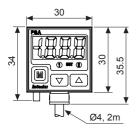






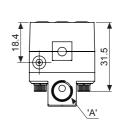


XA: Rc (PT) 1/8" (standard), NPT 1/8" (option)


Bracket A

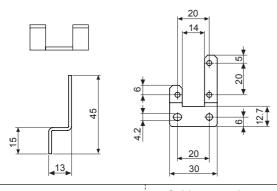



Bracket B

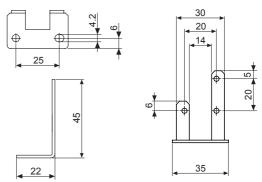




 

 


 


 • Sold separately (front cover (PSO-02))




PSB Series

 

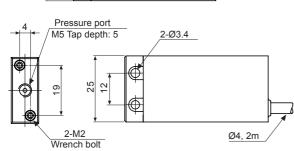

Connector type


8

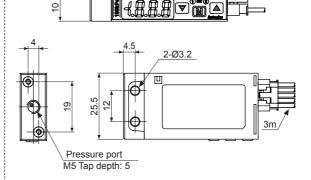


52

■ Control Output Diagram (PSA/PSB)

• NPN open collector output type

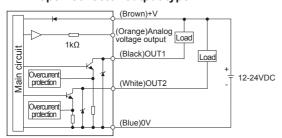


PNP open collector output type

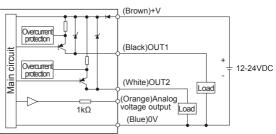

XThere is no short-circuit protection in analog voltage output. Do not connect this output to power supply or capacitive load directly.

※Please observe input impedance of connected equipment when use analog voltage output. And be sure to check voltage drop caused by resistance of extended wire.

Unit Description

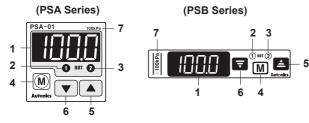

1. 31/2 digit LED display (red)

- : Display sensing pressure, every setting value and display error.
- 2. 1 output indicator (red): Output 1 is ON, LED will be ON.
- 3. 2 output indicator (PSA: red, PSB: green)
 - : Output 2 is ON, LED will be ON.

4. Mode key

: Parameter setting mode or preset setting mode, save setting value.

5. Up key

: Set the setting value to lower step in preset setting or pressure unit, output mode, response time, analog output scale, key lock, peak hold value, bottom hold value display in parameter setting.


6. Down key

: Set setting value to upper step in preset setting or pressure unit, output mode, response time, analog output scale, key lock, peak hold, bottom hold display in parameter setting.


7. Range of rated pressure

: It is possible to change the pressure unit in PSA Series. Please use different unit as label for your application.

Setting (PSA/PSB)

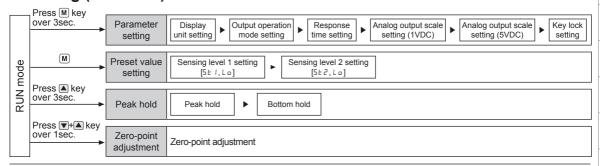

■ Zero Point Adjustment (PSA/PSB)

 

- In state of atmospheric pressure during RUN mode, press ▼ key and ▲ key at the same time for over 1sec.
- When the zero point adjustment is completed, it will display @@ and return to RUN mode automatically.
 Please execute zero point adjustment regularly.



If executing zero point adjustment when external pressure has been applied, Er I will be flashing. Please execute zero point again in state of atmospheric pressure. (A) Photoelectric Sensors

(B) Fiber Optic

(C) Door/Area Sensors

> (D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Sockets

....

Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

K) imers

Panel Meters

(M) Tacho / Speed / Pulse Meters

(N)

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers


(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software

Autonics E-19

Parameter Setting (PSA/PSB)

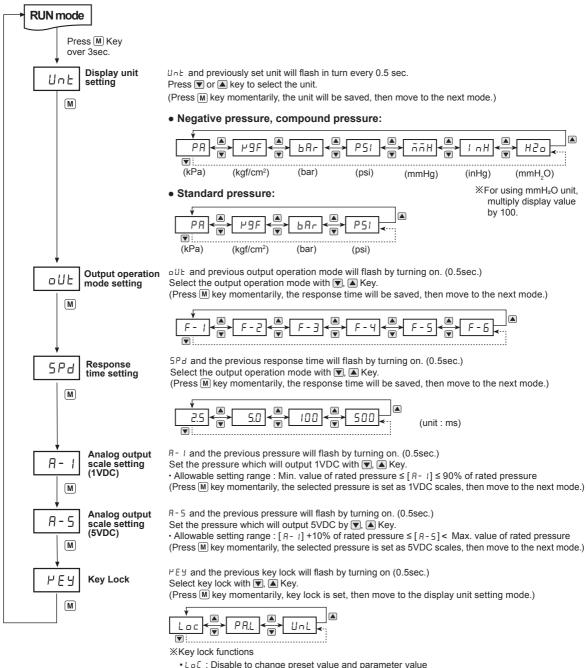

- L อโ : Disable to change preset value and parameter value (Enable to change ۲ ยิ mode only)
- PRL: Disable to change parameter setting/preset, zero point adjustment (Enable to check peak hold and bottom hold, and to change PEY mode)
- ปกุ L : Enable to change preset value and parameter value (Lock off)
- When advance to parameter setting mode and preset setting mode, it displays "Setting item" and "Previous setting value" by 0.5 sec. turn. This display will stop by pressing
 ▼ or ▲ key (Display setting value), if any key is untouched for over 1 sec., it will display old value by 0.5 sec. turn again.
- **When M key is pressed for 3sec. during setting, it will return to RUN mode with memorizing on EEPROM. However, when there is any key is untouched for 60sec., it turns to RUN mode with keeping the previous setting value not current setting value.
- **There is memory protection by EEPROM, but life cycle of EEPROM is 100,000 times.

E-20

Preset Value Setting (PSA/PSB)

© Hysteresis mode[F-1] and independent 2 output mode[F-3,F-4,F-5]













RUN mode

(D) Proximity

(C) Door/Area Sensors

(A) Photoelectric Sensors

Pressure

(F) Rotary Encode

(G) Connectors/ Sockets

Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(M) Tacho / Speed / Puls Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

 














Press ▼ or ▲ Kev to select 5 £ 2 setting value

※5₺ / setting range : Min. display pressure < 5₺ / ≤ Max. display pressure
</p> X5£2 setting range: - Hysteresis mode: Min. display pressure ≤ 5£2 < 5£1.
</p>

- 2 independent output mode: Min. display pressure < 5 t ≥ ≤ Max. display pressure

 
will flash in turn every 0.5 sec.

Press ▼ or ▲ Kev

to select 5 + 1 setting









After applying 5 ± 1 into

Pressure port,

then press

▲ Key.





After applying

Pressure port,

5 £ 2 into

▲ Key.

 
than press

will flash in turn every 0.5 sec.





5EL and previously set value will flash in turn every 0.5 sec.



Press ▼ or ▲ key to fineadjust the setting value between 5t 1 and 5t2. 5E 1+5E2

Adjustable range of set value: Between 5t 1 and 5t2.

**SE / setting range: Min. display pressure <5E / ≤ Max. display pressure – 1% of rated pressure

**TE / Setting range: Min. display pressure = 1% of rated pressure.

**TE / Setting range: Min. display pressure = 1% of rated pressure.

**TE / Setting range: Min. display pressure = 1% of rated pressure.

**TE / Setting range: Min. display pressure = 1% of rated pressure.

**TE / Setting range: Min. display pressure = 1% of rated pressure.

 
**TE / Setting range: Min. display pressure.

**TE / Setting range: Min. displa ※5₺2 setting range: 5₺ / + 1% of rated pressure <5₺2 ≤ Max. display pressure
</p>

○ Window comparison output mode[F-6]





 














Press or Key to select Lo setting value.





※High value setting range: L □ ≤ HI < Max. display pressure
</p>

- If no key is touched for 60sec., it will return to RUN mode. [Automatic sensitivity setting mode[F 2] is exception]
- When changing the display unit, preset value will be calculated according to the display unit.
- Whenever key touched one time, it is increased (decreased) as 1 digit (2 digits for psi unit and compound pressure) but it will be continuously increasing (decreasing) by pressing ▼, ▲ key constantly.

Peak Hold And Bottom Hold Check

- 1. Press kev for over 3sec. in RUN mode.
- 2. PEH and memorized max. pressure (Negative pressure type is for max. negative pressure) will flash by turning on (0.5sec.) then display peak hold value.
- 3. baH and memorized min. pressure (Negative pressure type is for min. negative pressure) will flash by turning on (0.5sec.) then display bottom hold value.
- 4. If pressing A key one time shortly, memorized peak hold and bottom hold value will be removed then return to RUN mode.
- *When the peak hold and bottom hold value is over the max. display pressure value, it displays HHH, On the opposite, it displays LLL. Please remove peak hold and bottom hold value by using A key.

F-21 Autonics

PSA / PSB Series

Output Operation Mode (PSA/PSB)

1. Hysteresis mode [F-1]

※It can be set for pressure sensing level[5½ /] and sensing difference[5½ 2].


: Min. display pressure < 5 Ł / ≤ Max. display pressure

5 ₺ ₴ setting range

: Min. display pressure ≤ 5 ± 2 < 5 ± 1

• OUT 1: When applying pressure is larger than 5 £ 1, it wil be ON.

• OUT 2: When applying pressure is lower than 5 £ 2, it will be ON.

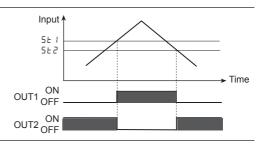

2. Automatic sensitivity setting mode [F-2]


**This function is to set pressure sensing level to the proper position automatically, it is set by received pressure from two positions [5£ 1, 5£2].

*The sensing hysteresis fixed to 1 digit (2 digits for psi unit and compound type)

**The pressure sensing level [5EE] is shown in the following calculation. $5EE = \frac{(5EI + 5E2)}{2}$

 OUT 1: When applying pressure is larger than 5EE value, it will be ON.

 OUT 2: When applying pressure is between 5₺ 1 and 5₺², it will be ON.

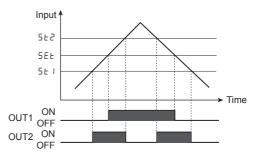

Note1) If it is not enough for difference of sensing level between 5£ 1 and 5£2, £r3 will be displayed. Please set again after applying enough pressure.

Note2) $5 \in I$ setting range: Min. display pressure $\leq 5 \in I \leq Max$. display pressure -1% of rated pressure $5 \in I \leq Max$. display pressure $1 \leq I \leq Max$. display pressure

Note3) If fine adjustment for sensing level is required, adjust sensing level by , ▲ key. (Adjustment range: Between 5 ≥ 1 and 5 ≥ 2)

3. Independent 2 output mode [F-3, F-4, F-5]

※5Ł I and 5Ł 2 can be set independently within display pressure range. One is for control, the other is for alarm or optional control.

**The sensing hysteresis fixed to 1 digit (2 digits for psi unit and compound type)

: Min. display pressure $\leq 5 \pm 1 \leq$ Max. display pressure 5 ± 2 setting range

: Min. display pressure $\leq 5 \, \ell \, \geq \, \text{Max.}$ display pressure

Independent 2 output mode [F - ∃]

• OUT 1: It will be ON, when it is over 5£ 1.

• OUT 2: It will be ON, when it is over 5 2.

• Independent 2 opposite mode [F - 4]


• OUT 1: It will be OFF when it is over 5t 1.

• OUT 2: It will be OFF, when it is over 5 2.

• Independent 2 cross mode [F - 5]

• OUT 1: It will be OFF when it is under 51.

• OUT 2: It will be ON, when it is under 5 t 2.

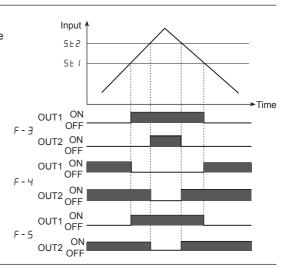

4. Window comparison output mode [F-6]

lephIt is able to set High limit value [μ I], Low limit value [μ I] of pressure sensing level in this mode.


**The sensing hysteresis fixed to 1 digit (psi unit and compound type 2 digits)

%L a setting range

: Min. display pressure ≤ L □ < Max. display pressure HI setting range : L □ ≤ HI < Max. display pressure

• OUT 1 : It will be ON between high limit value[HI] and low limit value[L []

• OUT 2 :It will be ON when it is over high limit value[HI] and low limit value[L a].

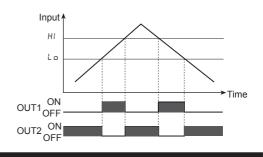

Functions (PSA/PSB)

O Pressure unit change

PS□-V01 (C) (P)/PS□-C01 (C) (P) has 7 kinds of pressure unit and PS□-01 (C) (P)/PS□-1 (C) (P) has 4 kinds of pressure unit.

Please select the proper unit for application.

- PS□-V01 (C) (P), PS□-C01 (C) (P) : kPa, kgf/cm², bar, psi, mmHg, inHg, mmH₂O

Output mode change

There are 6 kinds of control output modes in order to provide the various detection. Select a mode for your proper application.

• Hysteresis mode [F-1]

When variable hysteresis is required for pressure detection.

• Automatic sensitivity setting mode [F-2]

When it is required to set detecting sensitivity automatically at proper position.

• Independent 2 output mode [F-3,F-4,F-5]

When it is required to detect pressure from two position with one product.

• Window comparison output mode [F-5]

When is required to detect pressure in a certain range.

Response time change (chattering prevention)

It can prevent chattering of control output by changing response time. It is able to set 4 kinds of response time (2.5, 5, 100, 500ms) and if the response is getting longer, the sensing will be more stable by increasing the number of digital filter.

Analog output scale setting

It is not fixed the analog output (1-5VDC) scale as the rated pressure range but this is a function to change properly for user's application. When the position[R-1] for 1VDC output and the position [R-5] for 5VDC output are set, the pressure range of R-1 to R-5 is to 1-5VDC analog output.

Key lock

This unit has 2 kinds of key lock function in order to prevent wrong operation.

- L ¬C: All keys are locked, it is impossible to change any parameter setting/preset, zero point adjustment, peak hold and bottom hold. (Enable to change ¬E¬ mode only).
- PAL: It is impossible to change parameter setting/preset, zero point adjustment. (Enable to check peak hold and bottom hold, and to change PEY mode).
- ปก่ : All keys are unlocked.

© Zero-point adjustment

This function is to set the display value of pressure at zero when port is opened to atmospheric pressure.

Peak hold and bottom hold


This function is diagnosis malfunction of the system caused by parasitic pressure or to check through memorizing the max./min. pressure that occurred in the system.

© Error display


Error display	Description	Troubleshooting
Er I	When external pressure is input while adjusting zero point	Try again after removing external pressure
Er2	When overload is applied on control output	Remove overload
Er3	When the setting value is not matched with setting condition	Check setting conditions and set proper setting values
ннн	When applied pressure exceeds High-limit of display pressure range	Apply pressure within
LLL	When applied pressure exceeds Low-limit of display pressure range	display pressure range

Installation (PSA Series)

 
- When installing pressure port, it is able to bring pressure from 3 directions by changing the mounting direction of the pressure port.
- Basic spec of pressure port is Rc (PT) 1/8"and option pressure port is NPT1/8". Use general one-touch fitting.



 - 3. Please use seal tape at port plug in order to prevent pressure leak.
- 4. Please block another two pressure ports not used with port plug.



 Please connect it by using spanner (13mm) at the metal part in order not to overload on the body when connecting one touch fitting.



⚠ Caution

The tightening torque of one touch fitting should be max. 100kgf·cm. If not, it may cause mechanical problem.

(A) Photoelectric

(B) Fiber Optic Sensors

(D) Proximity

(C) Door/Area Sensors

> E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Sockets

Temperature Controllers

(I) SSRs / Power Controllers

Counters

Timers

(M) Tacho / Speed / Pulse Meters

Speed / Puls Meters

Display Units

Sensor Controllers

(P) Switching Mode Power Supplies (Q) Stepper Motors

& Drivers & Controllers (R) Graphic/ Logic Panels

Panels
(S)
Field

 
Devices

T) Software

Autonics E-23

PSA / PSB Series


- PSA Series has 2 kinds of brackets so it is able to install it in two different ways.
- At first, please unscrew hexagon wrench bolt and assemble the bracket on this unit by fixing the hexagon wrench bolt.



⚠ Caution


In this case, tightening torque of hexagon wrench should be max. 30kgf·cm. If not, it may cause mechanical problem.

 Bracket (PSO-01) and front protection cover (PSO-02) are sold separately. Please see the pictures for installation.




■ Installation (PSB Series)


1. Pressure port is M5. Use general one touch fitting.

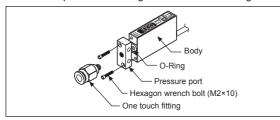

 It is able to use it without the pressure port according to environment. In this case O-Ring between pressure port and its body should not be taken out in order to prevent pressure leak.



 Please connect it by using spanner (10mm) at pressure port in order not to overload on the body when connecting one touch fitting.



⚠ Caution


The tightening torque of one touch fitting and hexagon wrench should be Max. 50kgf·cm and 20kgf·cm. It may cause mechanical trouble. Please do not use spanner to install as it may cause mechanical trouble.

Proper Usage


∧Caution

PSA, PSB Series is for sensing of non corrosive gas. Do not use this product at corrosive gas or flammable gas, etc.

- Please using this unit within the range of specification, if applying pressure is larger than specification, it may not be working properly due to damage.
- · After supplying power, it takes 3 sec. to work.
- When using switching mode power supply, frame ground (F.G.) terminal of power supply should be grounded.

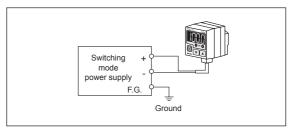

 - It may cause malfunction by noise, when wiring with power line or high voltage line.
- Do not insert any sharp or pointed object into pressure port. It may cause mechanical problem due to sensor damage.
- Do not use this unit with flammable gas, because this is not an explosion proof structure.
- Be sure that this unit should not be contacted directly with water, oil, thinner, etc.



• Wiring must be done with power off.

Accessory

PSA/PSB

Pressure unit label

±100kPa ±101.3kPa 100kPa 1MPa								
±1.020kgf/br/	-1.034kgf/tm²	1.020kgf/or	10.20kgf/cm					
±14.50psi	-14.70psi	14.50psi	145.0psi					
±1.000bar	-1.013bar	1.000bar	10.00bar					
±750nnhg	-760mmhg	×10	×10					
±29.5inHg	-29.9inHg	×100	×100					
±102.0mH ₂ O -103.4mH ₂ O ×1000 ×1000								
DISPLAY UNIT LABEL								

Only for PSA Series

Port plug

Bracket A



Bracket B

